



## Operation Mode

Use **standard** read command to read Address 4 of Length 1 in the RFU area to trigger the voltage output of the LED pad.

Frame	Command code	Storage Area	Addresses	Length	RN16	CRC16
0	11000010	00	00000100	00000001	RN16	CRC16

Table 1 LED-ON Command Format


Because there is no actual data at Address 4 in the RFU area, the return code of the read command is an error code and can be ignored.

Frame Head	Error Code	RN16	CRC16
1	00000011	RN16	CRC16

Table 2 LED-ON Command Returns

The LED will get flashing when RFID tag and reader is in certain distance.

## Demo Operating Steps

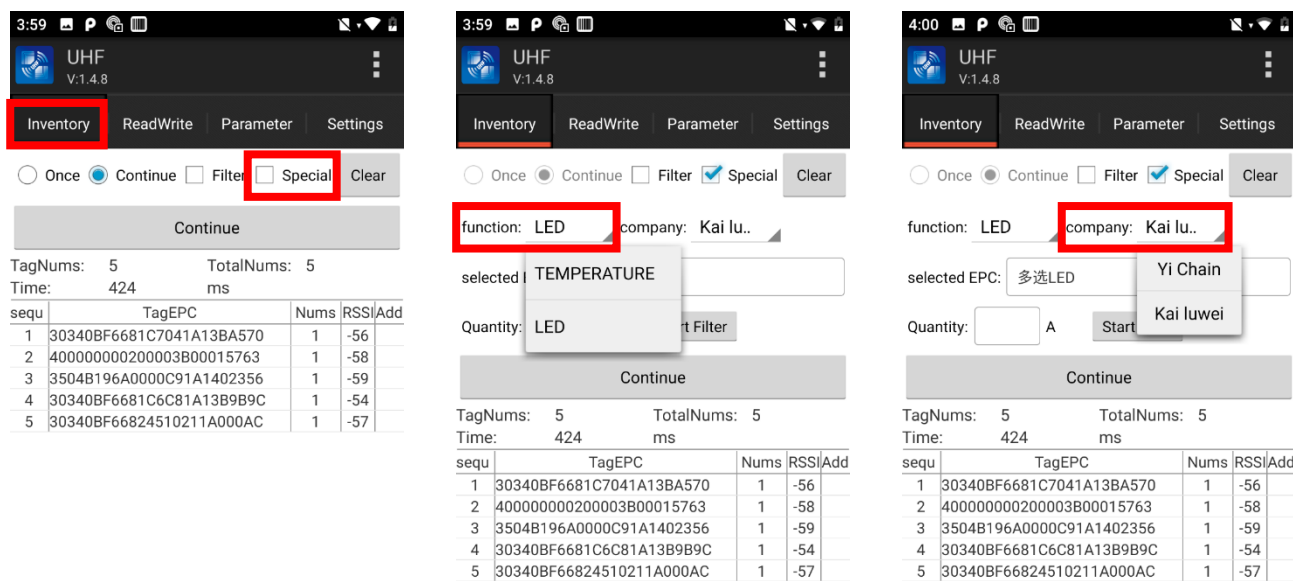

1. Enter "Inventory" interface, select "Special".
2. "Function" choose "LED".
3. "Company" choose "Kai luwei".

Kai Luwei is UHF chip company Kiloway name spells in above DEMO menu.



