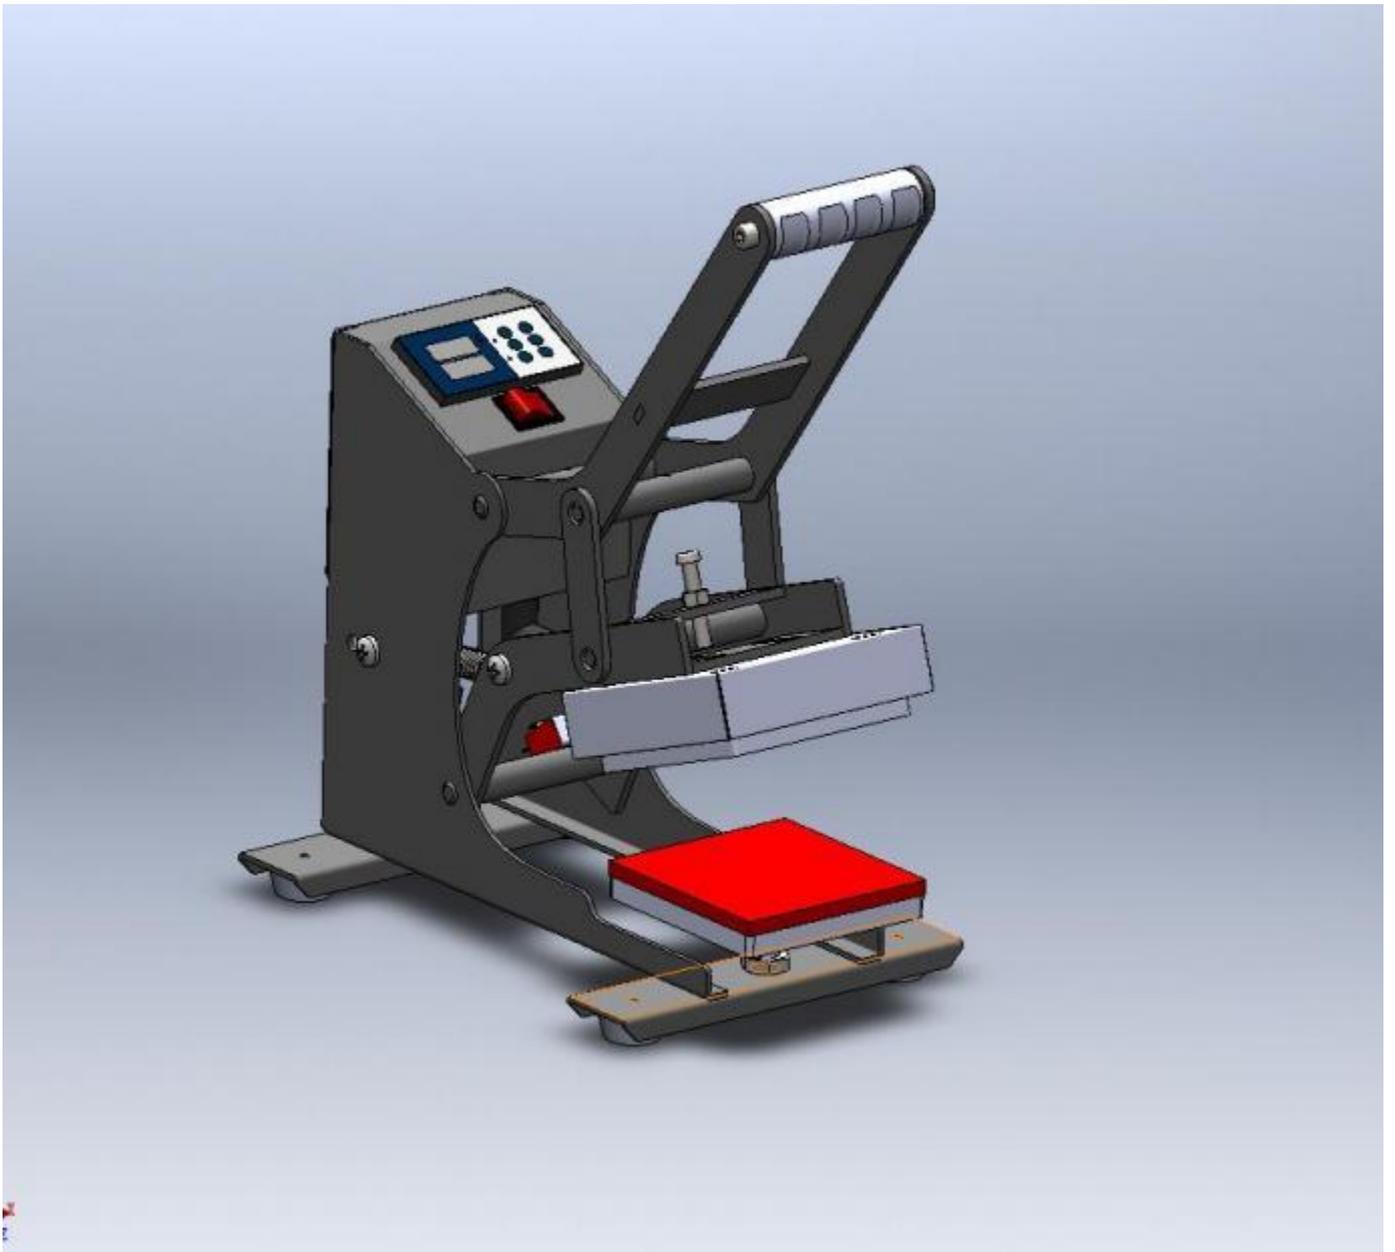

JYL-16E Manual Heat-Sealed Machine

Operating Manual



Catalogue

Summary.....	3
Characteristic.....	3
Qualification.....	3
Machine placement.....	3
Operate.....	4
Keep in repair.....	4
Mark drawing of the machine parts.....	5
Branching program.....	6
Warranty sheet.....	7

Before using this machine, please read this manual carefully to facilitate repair, maintenance and operation:

Summary

This machine is mainly used for hot stamping marks and small size area; hot stamping effect is ideal, the color pattern of sublimation, solvent ink and text can be pressed on cotton, hemp, velvet and other velvet, and small area of planting hair hot painting and foaming printing technology and other processing, economic and practical, convenient.

Characteristic

- Adopt advanced fast fixture, support heating plate, bottom plate screws to adjust the pressure; the pressure can be within the adjustment range Italian adjustment, convenient operation, can easily achieve the hot stamping effect, economic and practical.
- Heating wire and heating plate injection as one, safe, durable, uniform thermal distribution;
- Electronic liquid crystal temperature control, temperature 0-399 °C, control time 0-999 seconds;
- Heating plate titanium fluorine anti adhesive layer;
- The bottom plate is equipped with imported high temperature resistant silica gel, temperature resistance up to 350 °C unchanged.

Qualification

Voltage (V): 220 110

Power (kw): 0.5

Temperature range (°C): 0-399

Specification (cm): 12*12

Time control range (Sec): 0-999

Package size (cm): 49*26*34 cm

Overall weight (kg): 9.4 kg

Machine placement

Due to the small size, the machine is packed, connected to the appropriate supporting power supply, adjust the required time and temperature can operate, can be placed on the horizontal platform for operation, easy to operate, do not occupy space, personal and residential buildings can follow the actual situation

The information contained on this Document is considered to be confidential material proprietary to JYL-Tech, and this information shall not be disclosed, duplicated or copied for any purpose, Nor made available for any third party without the prior consent to JYL-Tech.

Operate

- 1, After determining the position of the machine, connect the power supply according to the required voltage of the machine;
- 2, Plug in the power, turn on the power main switch, the power indicator light immediately on (note: the whole machine must have suitable and reliable protection Ground protection line)
- 3, Due to the high temperature of the heating plate during the operation, please do not touch it to avoid scalding;
- 4, Adjust the thermometer to the required temperature (usually 120°C -220°C);
- 5, Adjust the schedule to the required time (usually about 5 to 20 seconds);
- 6, Put the substrate on the lower hot plate (note: the substrate and the hot paper do not wrinkle), then fold the hot paper (note: the back of the hot paper), push the handle down until the end (note: the force does not exceed 30 kg, otherwise it may lead Cause handle deformation.)
- 7, When the timing time of hot stamping is indicated, the buzzer rings and lifts the handle up back to the original position;
- 8, If it is cold torn hot paper, please use the eraser to balance the hot paper again, wait for 5-20 seconds, before tearing the hot paper. If it is hot torn paper, please tear the hot paper immediately after printing. Successful hot stamping requires the correct time, temperature and pressure, the thickness of clothes and the type of hot paper all affect hot stamping

The effect of all kinds of hot paper need to be tested hot sample approved, before mass production.)

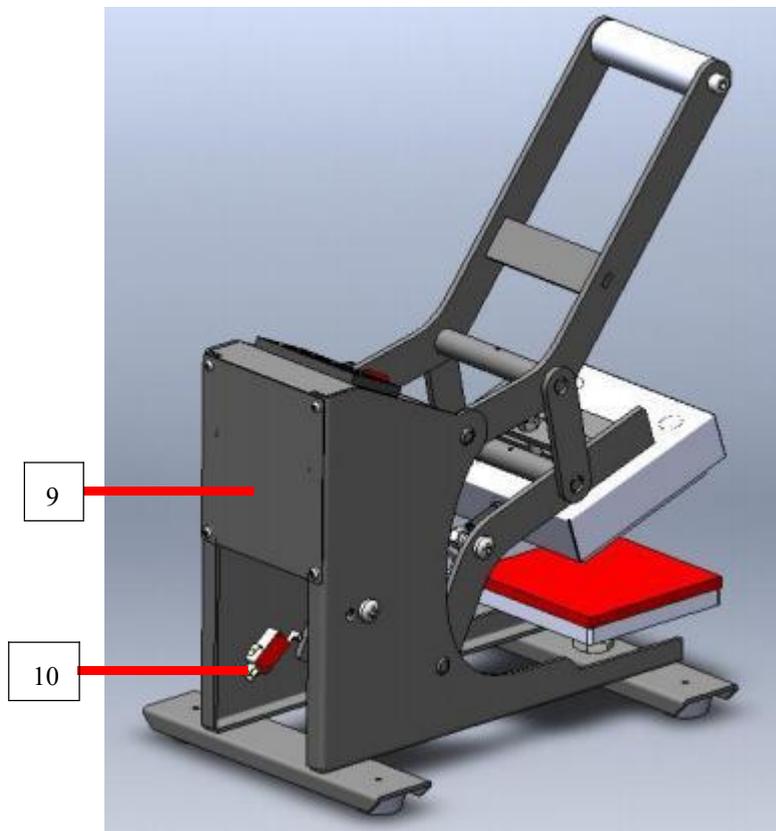
Keep in repair

1. Pressure adjustment: when the hot stamping is finished, the handle is lifted up and feel difficult, it can adjust the machine heating plate above Positioning screws, clockwise direction to increase pressure, counter clockwise direction to reduce pressure.
2. Time: when the hot stamping time arrives and the buzzer does not ring or stop, it is necessary to check the micro opening under the tail box Whether the distance of the contact point is moderate, if the discomfort is in, the appropriate position must be adjusted.
3. Temperature: When the adjusted temperature reaches, the temperature meter shows the required temperature to reach the user, (about 15 minutes to arrive 180°C), if the power starts for several minutes and the heating plate does not heat, please check the circuit.
4. When the handle is pressed down, the hand is released and the handle rises automatically. Please adjust the positioning adjustment screw downward.

JYL-16E Heat-Sealed Machine



1. Time and temperature two-in-one table
2. Power supply switch
3. Tension spring
4. Pressure handle
5. Positioning the screws
6. Heat up this board
7. The bottom plate
8. Base plate adjustment screws
9. Rear cover plate of the electric box
10. Microdynamic switch



The information contained on this Document is considered to be confidential material proprietary to JYL-Tech, and this information shall not be disclosed, duplicated or copied for any purpose, Nor made available for any third party without the prior consent to JYL-Tech.

Equipment warranty form

User unit:_____contacts:_____

customer address:_____telephone:_____

product model:_____manufacturing No:_____

size of product:_____date of purchase:_____

Warranty regulations

1. Repair with this warranty and delivery note (or payment receipt) during the warranty period;
2. Warranty period: one year from the sale (according to the date of purchase invoice or the date of factory). Under the normal use during the warranty and repair period, if the product is due to failure or damage, our factory will be responsible for repair Change or replace the damaged spare parts, the company free repair. After the warranty period, the company will give a paid maintenance.
3. Even during the warranty period, the Company will charge a certain maintenance fee for any damage caused by the following reasons:
 - A Damage to the machine caused by errors in use and unauthorized repair and modification;
 - B Machine damage caused by fire, flood, abnormal voltage, other natural disasters and some irresistible disasters bad;
 - C Damage caused by artificial fall and transportation after purchase;
 - D the artificial fault or damage caused by not operating according to the requirements of the company or using improper equipment;
 - E Machine failure and damage caused by factors other than the machine (such as external equipment factors);
4. Silicone gel, roller brush, acrylic and other non-electrical vulnerable accessories are not covered by the warranty;
5. The user's on-site service fee shall be calculated according to the actual cost and shall be borne by the customer. If there is another contract, the contract is the priority Principle treatment;
6. If you have any problems, you can contact the nearest office or the local dealer, or directly connect with the after-sales department of the company tie.

The information contained on this Document is considered to be confidential material proprietary to JYL-Tech, and this information shall not be disclosed, duplicated or copied for any purpose, Nor made available for any third party without the prior consent to JYL-Tech.